


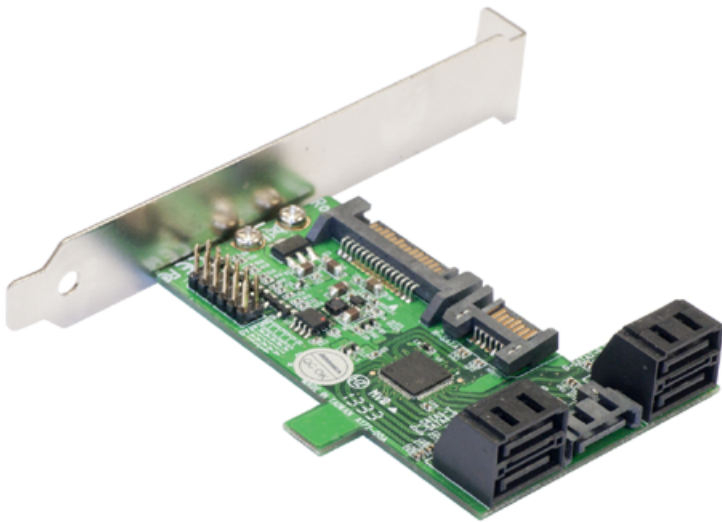

User Guide



Internal 5-port 6G Port Multiplier (AD5SAPM6G)

www.addonics.com

Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:


Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212


Email: <http://www.addonics.com/support/query/>

Overview

Front View

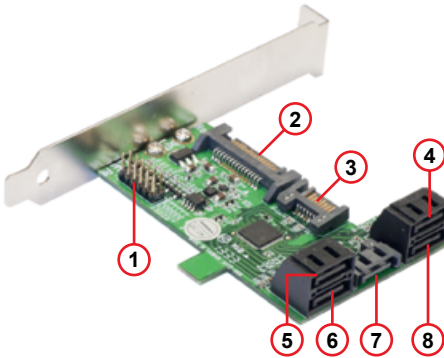

1. LED PIN
 2. SATA Power Connector
 3. Host Port
 4. P2
 5. P3
 6. P4
 7. P0
 8. P1
- P0 - P4 are device Ports

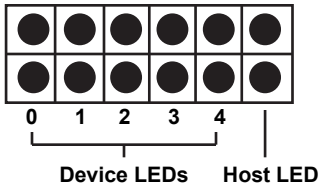

LEDs will glow to indicate a connection and blink to indicate activity. The Host LED will indicate activity for any and all drives, the drive LEDs indicate activity for each drive only.

Installation

1. Mount the port multiplier into any available slot. No bus connection is required.
2. Connect a SATA (15-pin) power cable to the port multiplier.
3. Connect the Host SATA connector to a Port Multiplier aware SATA controller.
4. Connect up to five individual hard drives.

Port Multiplier Compatibility

The Port Multiplier will only work with a Port Multiplier aware SATA host adapter. Identify your host controller and check with its hardware manufacturer if you are unsure. Addonics offers several Port Multiplier aware host adapters.

CONTACT US

www.addonics.com

Phone: 408-573-8580

Fax: 408-573-8588

Email: <http://www.addonics.com/sales/query/>