



User Guide

Mini DigiDrive IV
(AESDDNU3)

www.addonics.com

v7.1.11


Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:

Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212

Email: <http://www.addonics.com/support/query/>

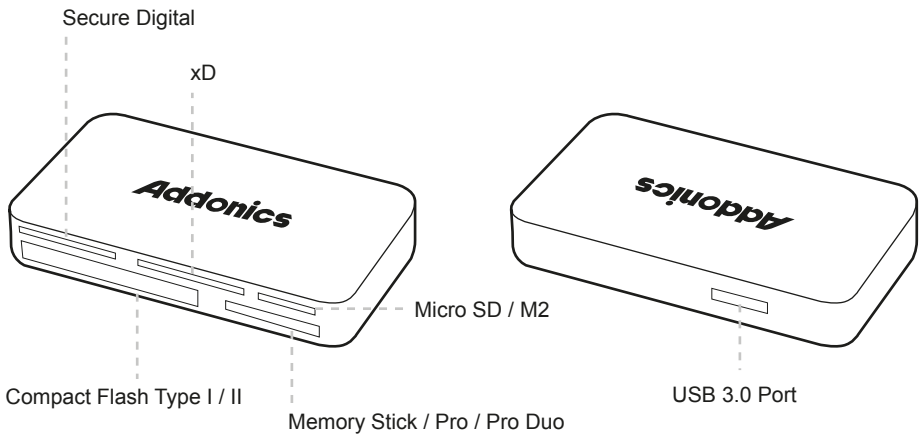

Note: Drive activity LED only lights up when a flash card is inserted.

Hardware Installation:

Plug and Play for Windows 2000, XP, Vista & 7

1. Plug in the USB 3.0 cable of the Mini Digidrive IV to a USB 3.0 port on the system.
2. Windows will detect a new hardware and will install all required driver for the Mini Digidrive IV.
3. Go to My Computer and you should see four removable drive letter icons.

Note: The maximum number of flash cards you can simultaneously use on the digidrive is 4.

Supported Flash Memory Cards:

Micro SD, Sony M2, Secure Digital (SD) and SDHC (SD 2.0), miniSD, Multi Media Card (MMC & MMC Plus 4.2), Reduced Size MMC (RS-MMC)(adapter needed), Memory Stick (MS)(Magic Gate), Memory Stick Pro (MS Pro 4bit), Memory Stick Duo (MS Duo), Memory Stick Pro Duo (MS Pro Duo), Compact Flash Type I (CF I), Compact Flash Type II (CF II), MicroDrive, Smart Media, xD

CONTACT US

www.addonics.com

Phone: 408-573-8580

Fax: 408-573-8588

Email: <http://www.addonics.com/sales/query/>