

Addonics

TECHNOLOGIES

DigiCopier Series

For model DGC1, DGC3, DGCDVD-SC, DGC7 and DGC11

User's Guide

Technical Support

If you need assistance to get your unit functioning properly, please call Addonics Technical Support. Our technical staff will be happy to assist you, but they will need your help to do so. Calling the technical support staff without all the proper information can be both time consuming and frustrating. Here are some tips to help you out:

Contact Information

Phone: 408-573-8580
Fax: 408-573-8588
Email: <http://www.addonics.com/sales/query/>
Internet: <http://www.addonics.com>


TECHNICAL SUPPORT

Phone: 408-453-6212
Hours: 8:30 am - 6:00 pm PST
Email: <http://www.addonics.com/support/query/>

The Panel


There are four buttons and an LCD on the panel of DVD Duplicator.

- 1 – LCD shows a function or a message.
- 2 – it is used to scroll up function menus.
- 3 – it is used to scroll down function menus.
- 4 – it is used to execute a function.
- 5 – it is used to cancel a function.

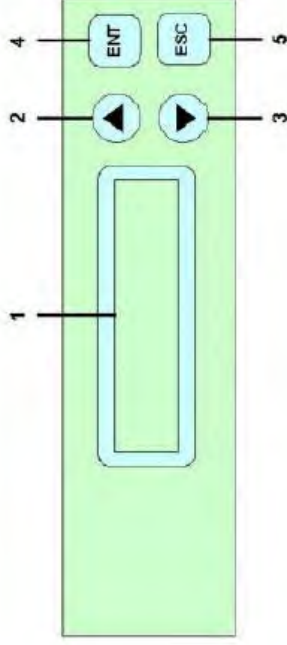


Functions

There are 11 major functions in the DVD Duplicator, and there are subfunctions in Function 9, 10, and 11.

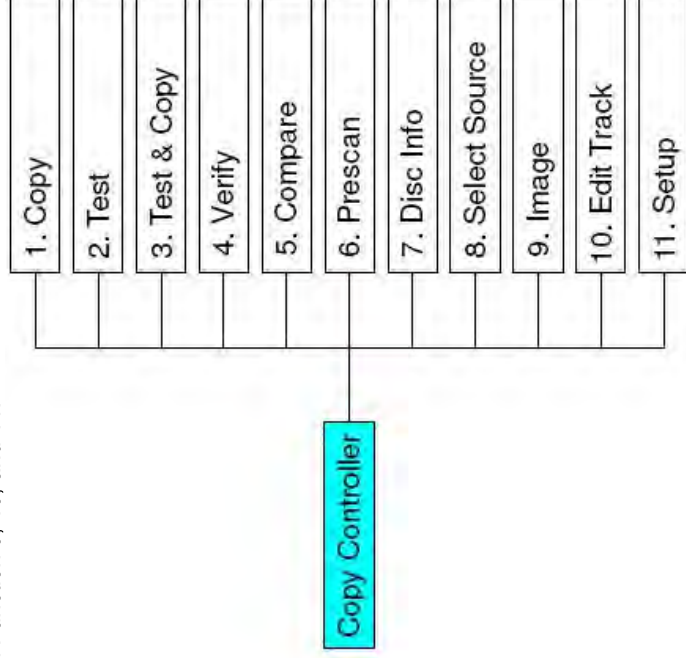

In Function 9, there are 8 subfunctions.

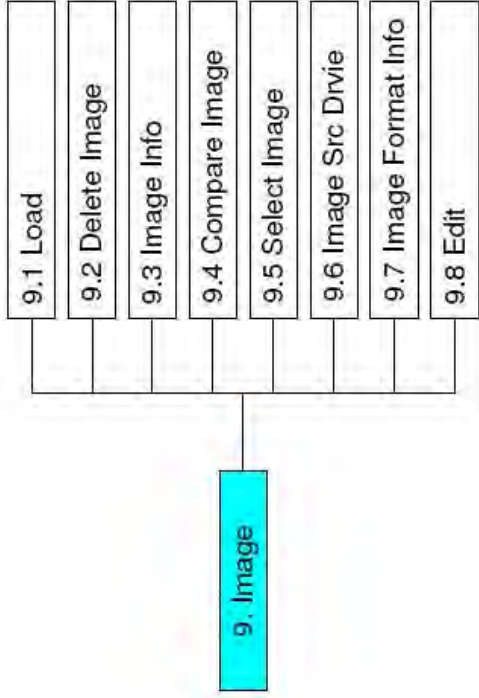

In Function 10, there are 4 subfunctions.

2.1 Copy

Function 1: Copy allows instant copy of source (original disc/image) to the target drives (burners). Before copying, be sure that the source DVD is placed into DVD-ROM, or there is data in a certain HDD partition if you have installed a hard drive and set it up as the source.

Select Function 1. Put a source DVD into DVD-ROM and blank DVDs into the DVD writers. A rewritable DVD containing old data can also be used, but the old data will be automatically erased.

1. Copy

After the DVD-ROM and DVD writers detect DVDs, press ENT to start copying. LCD will show the copying information as follows.

Copying-DVD	0%
4213.4MB	7:30

When copying is in progress, MB and time will decrease while the percentage of completion will increase. "MB" means the size of data that you want to copy.

When copying comes to an end, LCD will show the results as follows. The DVDs that were successfully copied will eject automatically.

1. Copy
OK: 07

2.2 Test

Function 2: Test is simulation of duplication function, no data will be written to the media (CDR/DVDR).

Select Function 2. Put a source DVD into DVD-ROM and blank DVDs into the DVD writers. Only a DVD-R disc supports this function.

2. Test

Press **ENT** to start simulation. If you use DVD rewritable discs that contain data, the old data will be quickly erased before simulation as shown below.

Erasing disc

LCD will show the testing information as follows.

Testing-DVD	0%
4213.4MB	7:30

When the test comes to an end, LCD will show the results as follows.

2. Test
OK: 07

Stopping the test halfway does not affect the DVDs, but if the DVD-rewritable discs contain important data, they may be corrupted.

2.3 Test & Copy

Function 3: Test & Copy is to test first and then make an actual copy.

Select Function 3. Put a source DVD into DVD-ROM and blank DVDs into the DVD writers.

3. Test & Copy

Press **ENT** to start simulation. LCD will show the testing information as follows.

Testing-DVD	0%
4213.4MB	7:30

When the test finishes, actual copying will begin as shown below.

Testing-DVD	0%
4213.4MB	7:30

When the whole process finishes, LCD will show the results as follows.

3. Test & Copy
OK: 07

Note that those discs that have passed the test will be copied right away while those that haven't won't be.

2.4. Verify

Function 4: Verify is to verify the data burned on CD/DVDs.

Select Function 4.

4. Verify

Press **ENT** to verify. LCD will show the verification information as follows.

Verify-DVD	0%
4213.4MB	7:30

When verification comes to an end, LCD will show the results as follows.

```
4. Verify
OK: 07
```

2.5 Compare

Function 5: Compare is to make a comparison between the source DVD and the target DVDs after copying.

Select Function 5. Put the source DVD into DVD-ROM and the target DVDs into DVD writers.

```
5. Compare
```

Press **ENT** to compare. LCD will show the comparison information as follows.

```
Compare-DVD 0%
4213.4MB 7:30
```

When comparison comes to an end, LCD will show the results as follows.

```
Compare OK: 7
Fail: 0 Diff: 0
```

Press **ENT** to see the details of source 1 as shown below.

```
Src: 02 DVD-RW
Identical
```

If comparison fails, LCD will show the failure. By pressing ENT twice, LCD will show that the contents of source 1 and those of source 2 do not match as follows.

```
Src: 02 DVD-RW
TOC not match
```

2.6 Prescan

Function 6: Prescan is to scan if the source DVD can be read correctly, and also to test the reading speed.

Select Function 6. Put the source DVD into DVD-ROM.

```
6. Prescan
```

Press **ENT** to prescan. LCD will show the scanning information as follows.

```
Scanning-DVD 0%
4213.4MB 7:30
```

When scanning finishes, and the source DVD can be read correctly, LCD will show the results as follows.

```
PreScan OK!
```

2.7 Disc Info

Function 7: Disc Info is use to generate a simple report of the source.

Select Function 7. Put the source DVD into DVD-ROM.

```
7. Disc Info
```

Press **ENT**, and LCD will show the DVD information as follows.

```
Disc Type: DVD-ROM
4213.4MB 7:30
```

2.8 Select Source

Function 8: Select Source is to identify and assign source drives.

Select Function 8.

```
8. Select Source
```

Press **ENT**, and then press **•** **€** to select the source as shown below.

```
Src: DVD-ROM
01 IDE1 Master
```

After selecting the source such as DVD-ROM, you can press **ENT**, and LCD will show the message as follows.

```
DVD-ROM selected
```

Suppose you select HDD as the source and try to copy from one of its partitions, but the partition contains no data, an error message will appear on LCD. At this moment, you can switch to another partition that contains data, or use function 9 Image to load the data into the chosen partition first.

2.9 Image

Function 9: Image is valid only when you have installed and connected a hard disk to the DVD duplicator. This function includes 7 subfunctions: Load, Delete Image, Image Info, Compare Image, and Image Format Info. The loaded data is called an image file.

Select Function 9.

```
9. Image
-----
P:A
```

2.9.1 Load

Press **ENT**. The LCD will display the following information.

```
9-01. Image P:A
Load      -----
          P:A
```

The function Load is to let you load data from DVD-ROM or any one of the DVD writers into the current partition of the hard disk. "P:A" means partition A.

Press **ENT** to load. LCD will show the loading information as follows.

```
Load-A-DVD 0%
4213.4MB   7:30
```

After the image file is successfully loaded, LCD will show the results as follows.

```
Image load OK
```

If there is an image file existing in the current partition, the system will ask you whether to overwrite it or not. Please use **•** **€** to confirm Yes or No.

```
Image Exists
Overwrite ? Yes
```

2.9.2 Delete Image

If you want to delete an image file stored in a particular partition, you can use the function Delete Image to do so. First, select the function by pressing **€**.

```
9-02. Image P:A
Delete Image
```

The system will ask if you are sure to delete. Use **•** **€** to confirm Yes or No.

```
Delete Image ? Yes
A: Unitted!!
```

After the image file is deleted, LCD will show the results as follows.

```
Partition A:
Image is deleted
```

2.9.3 Image Info

This function is to show the basic information of an image file stored in a particular partition. First, select the function by pressing **€**.

```
9-03. Image P:A
Image Info
```

Press **ENT**, and LCD will show the information of the image file as follows.

```
Img Type:DVD+R
Capacity: 4213.4MB
```

2.9.4 Compare Image

This function is to compare the contents of the source DVD and those of the image file in the partition. First, select the function by pressing **€**.

```
9-04. Image P:A
Compare Image
```

Press **ENT**, and LCD will show the information of the image file as follows.

```
Comp-A-DVD 0%
4213.4MB   7:30
```

When comparison comes to an end, LCD will show the results as follows.

```
Compare OK:1
Fail:0  DFF:0
```

Press **ENT** to see the details of source as shown below.

```
Src: 01 SUPER MUL
Total: 4213.4MB
```

Press **ENT** to see the details of target. If the comparison is identical, LCD will show the message as follows.

```
Tgt: 00 HDD P:A
Identical
```

If comparison fails, LCD will show the failure. By pressing **ENT** twice, LCD will show that the contents of source and those of target do not match as follows.

```
Tgt: 00 HDD P:A
TOC not match
```

2.9.5 Select Image

This function is to select a partition in the hard disk. First, select the function by pressing **€**.

```
9-05. Image P:A
Select Image
```

After installing a hard disk, your DVD duplicator will format it automatically. Each partition occupies 5GB. The number of partitions is dependent on the hard disk's capacity. The partitions are alphabetically arranged. Select a partition by pressing **• €**, and LCD will show the message as follows.

```
Select Partition
A: DVD 4213.4MB
```

After the partition is selected, LCD will show the results as follows.

```
Set Partition to
A
```

2.9.6 Image Src Drive

This function is to select DVD-ROM or any of the DVD writers as the source from which you can load data into a particular partition as an image file. First, select the function by pressing **€**.

```
9-06. Image P:A
Image Src Drive
```

Then, use **• €** to select DVD-ROM or any of the DVD writers as the source.

```
Select Img Src:
01 CH01 S-MUTLI
```

After selecting the source such as DVD-ROM, you can press **ENT**, and LCD will show the message as follows.

```
Load image from
Drive 10-00
```

2.9.7 Image Format Info

This function is to verify how you have formatted your hard disk. There are 3 formats for choice: CD, DVD, and DL (Double Layer). Now press **ESC** and **€** to enter the following figure.

```
9-07. Image P:A
Image Format Info
```

Press **ENT** to see the following figure. This figure shows that the hard disk has been formatted as DVD.

```
Image Format Info
Auto
```

2.9.8 Edit

This function is to name a certain partition, but only when the partition contains an image file, can title editing be valid. First, select the function by pressing **€**. First, select the function by pressing **€**.

```
9-08. Image P:A
Edit
```

Press **ENT**. A title should be composed of 1 to 13 characters. The character can be A, B, C, etc. or 1, 2, 3, etc. or the combination of both. Use **• €** to select the number or alphabet. After selecting a desired one, press **ENT**.

```
Edit Title
?
```

After keying in the title, press **ENT** to see the following figure.

```
Edit Sub1 Title
?
```

 
Sub1 Title let you key in a subtitle 1. You can press **ENT** again to key in a subtitle 2. When title editing is completed, you will see the next figure.

```
Edit Title
OK!
```

Steps to make the external eSATA hard drive as the source drive.

Note: The Digicopier is turned off. The external eSATA hard drive is connected to the eSATA port located at the back of the Digicopier and the hard drive is turned on.

1. Turn on the Digicopier.



2. The Digicopier detects a hard drive is connected.



3. Press ENT. This will format the drive.
4. To select the image (CD or DVD disk you want to copy) source drive, follow 2.9.6 (Image Src Drive) instructions.
5. To select the image you want to store on the external eSATA hard drive follow 2.9.5 (Select Image) instructions.
6. To load the image to the external eSATA hard drive, follow 2.9.1 (Load) instructions.
7. To select the hard drive as the source drive, follow 2.8 (Select Source).
8. To burn the image to the DVD or CD, place your blank CD or DVD and go to Copy and press ENT.



2.10 Edit Track (for CD only)

Function 10: Edit Track is exclusively designed for editing a collection of favorite songs from CDs. In other words, it can collect different tracks (songs) on a number of CDs and merge them into a single CD. This function includes 4 subfunctions: CD to CD, CD to HDD, Play Audio Track and Close Session.

Select Function 10.

10. Edit Track

2.10.1 CD to CD Edit

Press ENT. The LCD will display the following information.

10-01. Edit Track
CD to CD Edit

Here the function CD to CD Edit lets you select a track or more from CD-ROM, and then copy into blank CD-R/RWs.

Press ENT. The LCD will display the following information.

Select Track:
1/10 03:25

Here 1/10 means the number one of the 10 tracks, and 03:25 means the length of track.

You can press € to see the second track and so on. Suppose we decide to select the first track, then press ENT. A "+" will appear beside 1/10 as shown below. But pressing ENT again may cancel the selection.

Select Track:
+1/10 03:25

After selecting, please use • to move to the "End" menu as shown below.

Select Track:
End 11F03:25

Press ENT to finish the CD editing, and use • € to confirm Yes or No.

End edit with
and burn Yes.

LCD will show the copying information as follows.

Copying-24X Edit
1/10 -> 1/1

 
"1/1" means the first track of all tracks we have selected, and here we have just selected one track. When copying comes to an end, LCD will show the message as follows.

Burn Complete!
OK: 07


The system will ask if you want to keep editing. Please use • € to confirm Yes or No as shown below.

Continue edit
next Disc? Yes


If you want to keep editing, the current source CD will eject automatically, and the system will ask you to insert another new CD as shown below.



 
After inserting the new CD, press **ENT** to edit as before. Suppose we decide to select the second track, then press **ENT**. A “+” will appear beside 2/10 as shown below.



 
After selecting, please use • to move to the “End” menu as shown below.



 Press **ENT** to finish the CD editing, and use • € to confirm Yes or No.



 
LCD will show the copying information as follows.



“2/2” means the second track of all tracks we have selected, and so far we have selected two tracks from two different CDs. When copying comes to an end, LCD will show the message as follows.



 
The system will ask if you want to keep editing. Suppose we don't like to continue, then press € to confirm No.



Now press **ENT**. The system will ask if you want to close all CDs' sessions. Please use • € to confirm Yes or No as shown below.



 When closing comes to an end, LCD will show the message as follows.



2.10.2 CD to HDD Edit

After closing sessions, press **ESC** and € will display the following information.



Here the function CD to HDD Edit lets you select a track or more from CD-ROM, and then copy into a certain partition of HDD.

Press **ENT**. The LCD will display the following information.

 


Here 1/10 means the number one of the 10 tracks, and 03:25 means the playing time.

Suppose we decide to select the first track, then press **ENT**. A “+” will appear beside 1/10 as shown below. But pressing **ENT** again may cancel the selection.



After selecting, please use • to move to the “End” menu as shown below.



Press **ENT** to finish the CD editing, and use • € to confirm Yes or No.



 
Then, the track as an image file will be loaded into HDD. LCD will show the loading information as follows.



When loading comes to an end, LCD will show the message as follows.



The system will ask if you want to keep editing. Please use • € to confirm Yes or No as shown below.



If you want to keep editing, the current source CD will eject automatically, and the system will ask you to insert another new CD as shown below.

Insert next disc

After inserting the new CD, press **ENT** to edit as before. Suppose we select the second track, then press **ENT**. A "+" will appear beside 2/10 as shown below.

Select Track:
+2/10 04:25

After selecting, please use • to move to the "End" menu as shown below.

Select Track:
End 1Tk04:25

Press **ENT** to finish the CD editing, and use s t to confirm Yes or No.

End edit disc
and burn?Yes

Then, the track as an image file will be loaded into HDD. LCD will show the loading information as follows.

Load-P0-24X Edit
2/10 -> 2/2

When loading comes to an end, LCD will show the message as follows.

Image load OK

The system will ask if you want to keep editing. This time please use € to confirm No as shown below.

Continue edit
next Disc? No

If you want to keep editing, the current source CD will eject automatically, and the system will ask you to insert another new CD as shown below.

Insert next disc

After inserting the new CD, press **ENT** to edit as before. Suppose we select the second track, then press **ENT**. A "+" will appear beside 2/10 as shown below.

Select Track:
+2/10 04:25

After selecting, please use • to move to the "End" menu as shown below.

Select Track:
End 1Tk04:25

Press **ENT** to finish the CD editing, and use • € to confirm Yes or No.

End edit disc
and burn?Yes

Then, the track as an image file will be loaded into HDD. LCD will show the loading information as follows.

Load-P0-24X Edit
2/10 -> 2/2

When loading comes to an end, LCD will show the message as follows.

Image load OK

The system will ask if you want to keep editing. This time please use € to confirm No as shown below.

Continue edit
next Disc? No

Then, the system will ask if you want to burn from HDD into CD-R/RW or move into a partition. Please use • to confirm Burn as shown below.

Burn or Move to
partition? Burn

After pressing • , LCD will show the copying information as follows.

Copy-P0-24X 0%
1/2 Tk03:25

When burning finishes, LCD will show the results as follows.

Burn finished!
OK

Press **ESC**. The LCD will display the following information. And press € to move the data from HDD template into a certain partition.

Burn or Move to
partition? Move

After pressing **€**, you need to select a partition into which the data will be moved. Suppose we select A as shown below.



After pressing **ENT**, LCD will show the moving information as follows.



When moving finishes, LCD will show the results as follows.



If the chosen partition contains image data, the system will ask to overwrite or keep the data. Press **•** to overwrite.



After pressing **•**, LCD will show the moving information as follows.



When moving finishes, LCD will show the results as follows.



2.10.3 Play Audio Track

This function is to make the DVD duplicator act as a music player. You can connect a headphone to the headphone jack on the source, and enjoy the music. Now press **ESC** and **€** to select the function.



Use **• €** to select the track you want to play.



After selecting and pressing **ENT**, LCD will show the playing information below.



2.10.4 Close Session

This function is to close CD session. After closing, you can put the CDs on any normal player and listen. Now press **ESC** and **€** to select the function.



After pressing **ENT**, the system will ask if you are sure to close.



After pressing **ENT**, LCD will show the message as follows.



When closing finishes, LCD will show the results as follows.




2.11 Setup

Function 11: Setup lets you change the default settings. Once you change a setting, remember to press **ENT** to save it. However, it is suggested to use the defaults for optimal operation.

This function includes 21 subfunctions: Language, CD Burn Speed, DVD Burn Speed, Read Speed, Auto Start Drive, Startup Menu, Auto Verify, Auto Compare, Auto Prescan, Eject Disc, Burn On The Fly, Burn Mode, Display Time, Button Sound, Device Info, System Info, Quick Erase, Full Erase, Auto Close Tray, Quick Compare, and Audio Burn Speed.

 Select Function 11.



2.11.1 Lanuage
Press **ENT**. The LCD will display the following information.



The function Lanuage lets you select a language in which messages will be displayed on LCD.

 
Press **ENT**. The LCD will display the following information




The default is English.

2.11.2 CD Burn Speed

Now press **ESC** and **€** to enter the following figure. This function lets you control the burning speed of CD writers.




 Press **ENT** to enter the following figure. The default is auto.



2.11.3 DVD Burn Speed

 Now press **ESC** and **€** the LCD will display the following information.



The function DVD Burn Speed lets you control the burning speed of DVD writers.

 
Press **ENT**. The LCD will display the following information.



The default is maximum.

2.11.4 Read Speed

Now press **ESC** and **€** the LCD will display the following information. The function Read Speed lets you control the reading speed of target CDs.



Press **ENT**. The LCD will display the following information.



The default is maximum, but there are still other choices: 32X, 16X and 8X.

 
2.11.5 Auto Start Drive

Now press **ESC** and **€** the LCD will display the following information.



Auto Start Drive is to copy or test automatically once you put blank DVDs into the writers.


Press **ENT**. The LCD will display the following information.



The default is OFF. Press **€** to select 1 (one blank DVD).


2.11.6 Startup Menu

 Now press **ESC** and **€** the LCD will display the following information.



Startup Menu lets you select any one of the functions except Adv Setup as the first item appearing on the menu whenever you turn on the copy controller.

 Press **ENT**. The LCD will display the following information.



The default is Copy. You can certainly select any other function as the first item, but remember to press **ENT** to confirm.

2.11.7 Auto Verify

Now press **ESC** and **€** the LCD will display the following information.



 
Auto Verify is to verify automatically if the target DVDs can be read after copying.

Press **ENT** to enter the following figure. The default is Off. Press **€** to select On.



2.11.8 Auto Compare

Now press **ESC** and **€** to enter the following figure. Auto Compare is to compare automatically the source DVD and the target DVDs after copying.




Press **ENT** to enter the following figure. The default is Off. Press **€** to select On.



2.11.9 Auto Prescan

 Now press **ESC** and **€** to enter the following figure.



Auto Prescan is scan automatically if the source DVD can be read correctly, and to test the reading speed.

Press **ENT** to enter the following figure. The default is Off. Press **€** to select On.



2.11.10 Eject Disc

Now press **ESC** and **€** to enter the following figure.



Eject Disc provides three choices.

They are Eject Good Only, Eject All Disc, and Do Not Eject.

Eject Good Only means that the DVDs will eject automatically only when they are copied successfully.

Eject All Disc means that the DVDs will eject automatically whether they are copied successfully or not.

Do Not Eject means that you need to eject the DVDs manually when copying finishes.

Press **ENT** to enter the following figure. The default is Eject Good Only. Press **€** to select Eject All Disc or Do Not Eject.



2.11.11 Burn On The Fly

Now press **ESC** and **€** to enter the following figure. Burn On The Fly lets you control the copying methods. When the setting is On, the data will be copied directly from the source DVD to the target DVDs. When the setting is Off, the data will be loaded into a partition of HDD first, and hence copying will be done.



Press **ENT** to enter the following figure. The default is On. Press **€** to select Off.



2.11.12 Burn Mode

Now press **ESC** to return to Function 11, and then select subfunction 12 Burn Mode as the following figure shows.

Burn Mode lets you control the burning modes. There are two modes: DAO (Disc At Once) and TAO (Track At Once). They only supports CD. If the DVD writer doesn't support the mode you have selected, the copy controller will automatically switch to another mode.



Press **ENT** to enter the next figure. The default is DAO. Press **€** to select TAO.

 


2.11.13 Display Time

Now press **ESC** and **€** to enter the following figure. Display Time is to show the copying time.



Press **ENT** to enter the next figure. The default is On. Press **€** to select Off.



2.11.14 Button Sound

Now press **ESC** and **€** to enter the following figure. Button Sound lets you control the sound of a button when you press it.



Press **ENT** to enter the next figure. The default is On. Press **€** to select Off



2.11.15 Device Info

Now press **ESC** and **€** to enter the following figure. Device Info shows the information of the DVD-ROM and any of the DVD writers you have installed.

```
11-15. Setup
Device Info
```

Press **ENT** to enter the next figure.

```
00 CH01
S-MULTI:PIONEER
```

Press **ENT** to enter the next figure.

```
DVD-RW DVR-112
1.22
```

2.11.16 System Info

Now press **ESC** and **€** to enter the following figure. System Info shows the information of the system.

```
11-16. Setup
System Info
```

Press **ENT** to enter the next figure.

```
OS: Win 1.0.0.5
2007/12/20 ACARD
```

Press **ENT** to enter the next figure.

```
CopyAp ver:0.40
2007/12/20
```

Press **ENT** to enter the next figure.

```
CopyAp ver:0.40
2007/12/20
```

Press **ENT** to enter the next figure.

```
DVD Duplicator
DDR Memory: 128M
```

Press **ENT** to enter the next figure.

```
UI ver:0.40
2007/12/20
```

2.11.17 Quick Erase

Now press **ESC** and **€** to enter the following figure. Quick Erase is to erase the data on the DVD rewriteable discs quickly.

```
11-17. Setup
Quick Erase
```

Press **ENT** to enter the next figure. Use **• €** to confirm Yes or No.

```
All data will be
lost, erase? Yes
```

After confirming Yes and pressing **ENT**, LCD will show the message as follows.

```
Erasing disc
00:25 (Quick)
```

When erasing finishes, LCD will show the results as follows.

```
Quick Erase
OK:10
```

2.11.18 Full Erase

Now press **ESC** and **€** to enter the following figure. Full Erase is to erase the data on the DVD rewriteable discs completely. Compared with Quick Erase, Full Erase takes longer time to do the job.

```
11-18. Setup
Full Erase
```

Press **ENT** to enter the next figure. Use **• €** to confirm Yes or No.

```
All data will be
lost, erase? Yes
```

After confirming Yes and pressing **ENT**, LCD will show the message as follows.


```
Erasing disc
45:00 (Full)
```

When erasing finishes, LCD will show the results as follows.

```
Full Erase
OK:10
```

2.11.19 Auto Close Tray

Now press **ESC** and **€** to enter the following figure. Auto Close Tray is to close the writer's tray automatically. It is related to function 11.5 Auto Start Drive. If you haven't set any writer to copy in function 11.5, this function will be invalid.

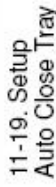

11-19. Setup
Auto Close Tray

Press **ENT** to see the following figure.



Auto Close Tray
5

Here 5 means that it takes 5 seconds to close the writer's tray automatically after copying finishes and the tray is ejected. Besides 5 seconds, there are 10, 15, 20, 25, 30, 35, 40, 45, and 50 seconds for choice. If you have set one or all seven writers in function 11.5, and choose 10 seconds here, then one writer's tray or all seven writers' trays will be closed in 10 seconds after copying finishes.

2.11.20 Quick Compare

Now press **ESC** and **€** to enter the following figure. Quick Compare is related to function 5 Compare. It lets you set a certain byte. When the error of a target DVD is beyond the set byte, the comparison between the source DVD and the target DVD will stop. Yet the comparison of the other 6 target DVDs will continue.



11-20. Setup
Quick Compare

Press **ENT** to see the following figure. The default is Off, but you can press **€** to choose a certain byte like 1 Byte, 1 KB, 10 KB, 100KB, 1 MB, etc.



Quick Compare
Off

2.11.21 Audio Burn Speed

Now press **ESC** and **€** to enter the following figure. Audio Burn Speed lets you control the burning speed of audio CDs.



11-21. Setup
Audio Burn Speed

Press **ENT** to see the following figure. The default is auto, but there are maximum, 40X, 32X, 24X, 20X, etc. for choice.



Audio Burn Speed
Auto

Troubleshooting

3.1 About LCD

After you power up, if there is no display on the LCD, check if the connection of power cord is firm and the environment of power outlet is normal.

3.2 About Error Messages

During Copy, Test, Compare and Verify, etc. if you press ESC to abort, an error message will appear on LCD. Abortion may cause the copy controller to hang up, therefore you have to power on again.

If reading fails, an error message will appear on LCD. Get a new source DVD to try again.

If the copy controller hasn't detected any device after powering on, an error message will appear on LCD.

3.3 About DVD-ROM/DVD Writers

If a DVD-ROM or a DVD writer cannot read, confirm the format of the source DVD and check if it is damaged.
Use any DVD writer to read the source DVD. If it works, the DVD-ROM is probably defective or not compatible with the source DVD.

3.4 About Buttons

If you press any one of the four buttons on the panel, but there is no response, it is perhaps that the button cannot function well. Inspect the jumper setting.

3.5 About DVD Writer Not Readable

After copying if the DVD writer is not readable, use Compare to examine, or get another DVDROM to test.

3.6 About High Failure Rate

If the failure rate of copying is high, do the following things to improve.

- Lower the speed of DVD writer.
- Inspect if the blank disc's quality is good.
- Update the firmware.
- Inspect the DVD writer's maximum writing speed. If the speed is over 8X, copy the data to a hard disk first, and then transmit to DVD.

3.7 About Firmware Update

If you cannot update the firmware, please inspect the firmware. Perhaps you have downloaded a wrong file.
Failure in firmware update may cause the copy controller to fail in booting.

Appendix A LCD Messages

1. Normal Conditions:

- All data will be lost, erase?**.....All data on the disc will be lost. Confirm the erasing of data.
- Analyzing**.....Analyze the source disc.
- Audio Disc!!! Can't compare!**.....The system cannot compare the audio discs.
- Cannot read TOC**.....The system cannot read the contents of disc.
- Check Target Please Wait**.....The system is checking the target device.
- Detect Drives**.....Detect what drives are connected with the system.
- DVD-RW does not Support the Func**..... DVD-RW doesn't support this function.
- Erase Finished**..... The erasing of data comes to an end.
- Erasing disc**.....The system is erasing the data on the disc.
- Fail to get Drive Info!**..... The drive information cannot be obtained.
- Fail to get Src Disc Info!**..... The information of source disc cannot be obtained.
- Hold ESC to exit**..... Press ESC for a second to terminate the test.
- Identical**..... The comparison results are the same.
- Initialize SDRAM**.....Initialize the memory of the system.
- No Erasable Disc in DVD-RW**.....Do you want to load the default settings? rewritable. The disc on the DVD-RW device is not rewritable.
- Preparing**..... The system is preparing to record.
- Press a Key to Eject Fail Disc**.....Press any key to eject the failed disc after copying.
- Press a Key to Eject Good Disc**.....Press any key to eject the good disc after copying.
- Read disc error**.....During comparison the disc cannot be read.
- Save new config Fail!**..... The new setting of configuration cannot be saved.
- Source Disc Empty!!!**..... The source disc doesn't contain any data.
- Source Disc Not Ready**..... Source disc is not ready to be read.
- Source Drive Not Ready**.....Source drive is not ready to read.
- Src&Tgt can't in the same channel**.....During comparison the source and target discs cannot be in the same channel.
- Target Disc Not Empty!!!**..... The target disc still has data.
- Target Disc Not Ready**..... Target disc is not ready to be written into.
- Target Drive Not Ready**.....Target drive is not ready to write.
- Target overflow**..... The target disc hasn't enough capacity to store new data.
- TOC not match**..... The comparison results are not the same.
- User Abort!**.....Cancel the job during operation.
- 2. Connecting with a HDD:**
- All data will be lost, format?**.....All data on the hard disk will be lost. Confirm the formatting of hard disk.
- Delete Image in Partition xx?**..Confirm the deleting of data image in partition xx.
- Format HDD?**..... Ask if you want to format the hard disk.
- Format HDD OK!**.....The Formatting of hard disk has been completed.
- HDD not Format!**.....The hard disk hasn't been formatted yet.
- HDD too small**..... The capacity of hard disk is too small.
- HDD too small to handle i**.....The hard disk hasn't enough capacity to store the data image (at least 5Gbytes).
- Image Exists Overwrite?**.....There is a data image in the current partition. Confirm the overwriting of data.

Image load Fail.....The image isn't successfully loaded from DVD to the hard disk.

Image load OK..... The image is successfully loaded from DVD to the hard disk

No Image in Partition xx.....There is no data image in partition xx.

No Valid HDD!..... The system cannot find a hard disk.

Partition Damage.....The partition is damaged.

Select HD First!..... Select a formatted hard disk at first.

Verify Disk or Partition?..... Do you want to verify the hard disk or just a partition?

Verify Hard Disk Fail!..... The hard disk is not verified successfully.

3. Audio Editing:

Burn or Move to partition?.....Do you want to directly copy the data into disc or move them to the partition.

Can't edit HDD..... The hard disk cannot be edited as a source audio disc.

Close all disc's session?..... Confirm the closing of disc sessions.

Continue edit next Disc?..... Ask if you want to continue the music disc editing.

End edit disc and burn?..... Finish the music disc editing and start to copy.

Erase selected Tracks?..... Abort the selected tracks and delete them.

Ins empty disc Continue?..... Do you want to insert a blank disc and continue copying?

Insert next disc..... Insert the next audio disc.

NO AUDIO track in this disc..... The source disc has no audio track.

Sessions were closed already!..... The disc sessions have already been closed.

Target Overflow Re-Select.....The disc capacity is not enough to store the selected tracks. Please select again.

Tgt overflow, del last trk?..... The disc capacity is not enough to store the selected tracks. So, do you want to delete the last track?

4. Firmware Update:

Check Sum Error!..... The updated firmware has errors.

Flash ROM fail!..... Data cannot be written into Flash ROM.

Invalid firmware..... The disc doesn't contain a valid firmware.

Last update F/W Fail!..... The firmware is not updated successfully.

Last update F/W OK!..... The firmware is updated successfully.

Searching F/W..... The system is searching for a valid firmware.

Source can't be Hard Disk!.....During comparison the source cannot be hard disk.