

User Guide

Snap-In SATA Mobile Rack

(AESNAPMRSA / AESNAPMRI / AESNAPMRSI / AESNAPMRU2)

www.addonics.com

v5.1.11

Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:

Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212


Email: <http://www.addonics.com/support/query/>

Locking Mechanism: Acts as a power switch for the snap-in mobile rack and also locks the front panel.

To turn on power and secure the hard drive to the enclosure, use the keys provided to turn the locking mechanism located on the front panel to Lock position.


AESNAPMRSA

Installation: For power, plug-in either the 4-pin Molex power connector or the 15-pin SATA power connector. Connect the Serial ATA cable for data connection.

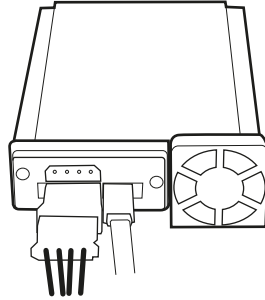


AESNAPMRI

Installation: For power, plug-in the 4-pin floppy power connector of the Y power cable that came with the SATA to IDE adapter. Connect the 40-pin IDE ribbon cable for data connection.

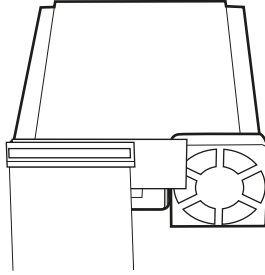

AESNAPMRSI

Installation: For power, plug-in the 4-pin floppy power connector of the Y power cable that came with the SATA to SCSI adapter. Connect the 68-pin SCSI cable for data connection.

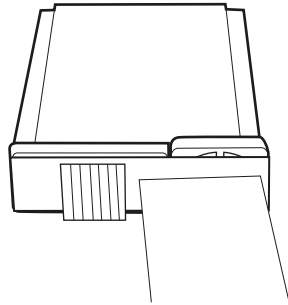

AESNAPMRU2

Installation: For power, plug-in the 4-pin floppy power connector of the Y power cable that came with the SATA to USB2.0 adapter. Connect the USB 5-pin header for data connection.

