

Addonics
TECHNOLOGIES

User Guide



**1U Rack for 2.5" HDD/SSD, 2 SFF-8088
connectors**

(R1825SN-2MS)

CONTACT US

www.addonics.com

Phone: 408-573-8580

Fax: 408-573-8588

Email: <http://www.addonics.com/sales/query/>

Technical Support



If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:

Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212

Email: <http://www.addonics.com/support/query/>

Unpacking and overview

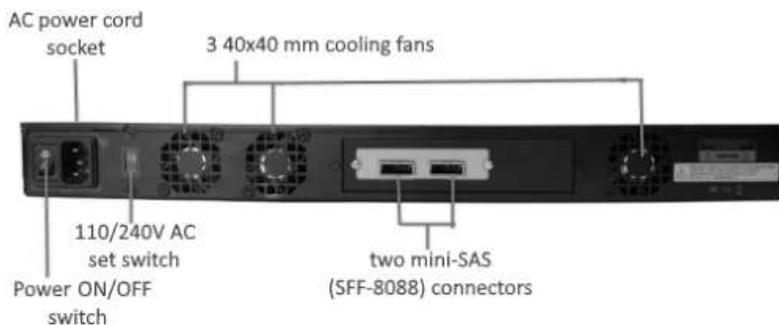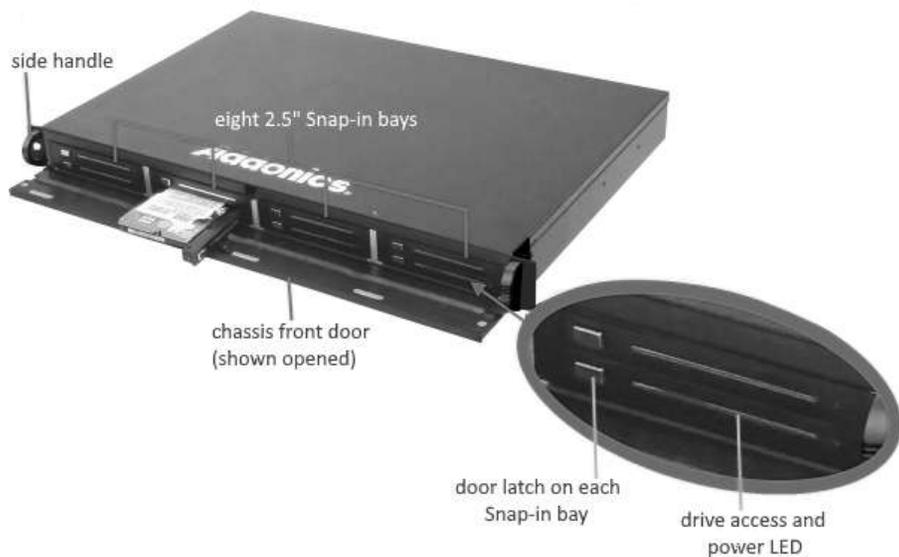

WARNING: Please remember to set the power supply to your local outlet voltage prior to plugging in the power cord. Failure to do so may damage the power supply.

Installation

1. Unlatch the drive bay door by pushing the rectangular button on the door to the right. The Eject lever should swing open.
2. Insert a drive into each bay as desired, SATA connectors first, label side up, push the drive into the bay. *Do not force the drive in if you feel resistance.*
3. Close the drive bay door till it is latch securely.
4. Connect two Mini SAS cables between the back of the 1U Rack and a computer.
5. Make sure the AC input switch is set correctly, then connect the power cord to an AC outlet.
6. Turn on the 1U Rack by switching the AC power switch on the rear to ON,

To remove a drive, unlatch the drive bay as described in step 1 above and pull the Eject Lever until the drive disengages from the internal connector then pull the drive out.

Hot Swapping drives

The R1825SN-MS unit supports hot swapping (inserting or removing drives while the drives are running and connected to a computer). The controller on the computer must also support hot swapping - be sure to confirm this before attempting to insert or remove drives while the system is running. Also be sure to practice the appropriate safe removal procedure before proceeding. Failure to practice safe removal procedures will result in loss or corruption of data.