



ADDONICS TECHNOLOGIES


Model: ADESPCFT

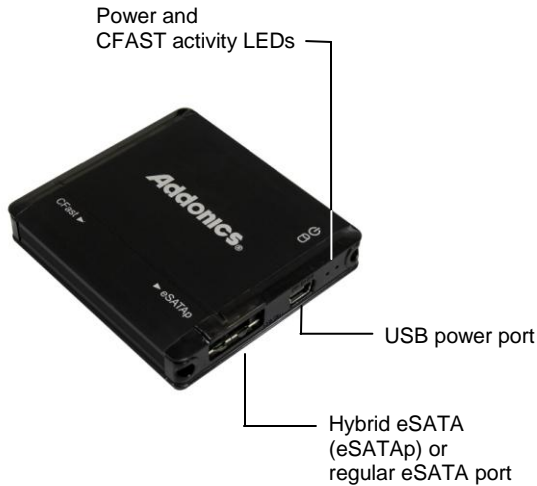

II. eSATA Host Controller

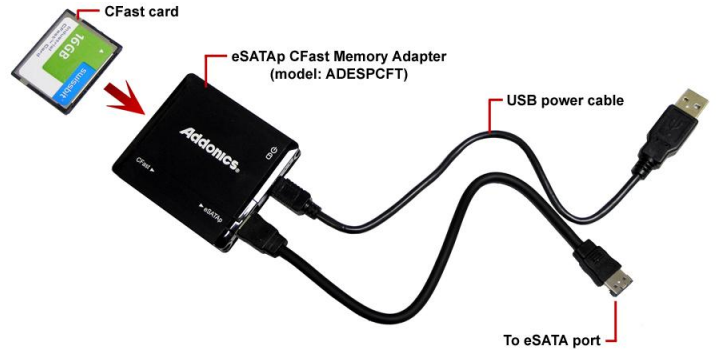

Optional USB 2.0 Connection using eSATA – USB adapter

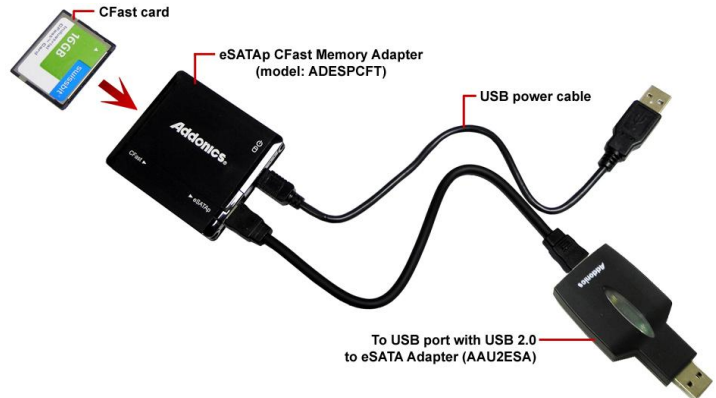


Connecting the eSATAp CFAST Memory Adapter

Note: The eSATAp CFAST memory adapter does not require any driver to be installed on the system.

It is assumed that the driver for the Hybrid eSATA (eSATAp) or regular eSATA host controller that the eSATAp CFAST memory adapter will be connected to has been correctly installed.

I. Hybrid eSATA (eSATAp) Host Controller

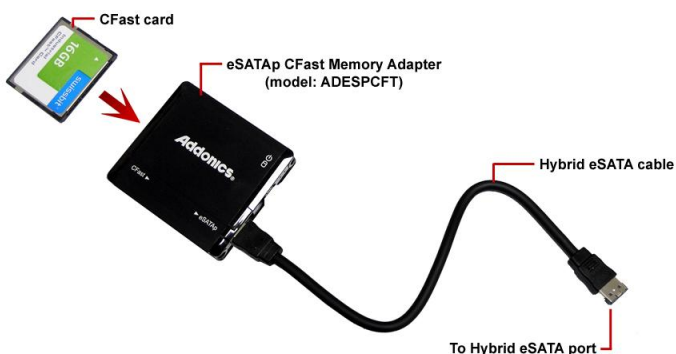

TECHNICAL SUPPORT

Email: <http://www.addonics.com/sales/query/>
Internet: <http://www.addonics.com>

Technical Support (8:30 am to 6:00 pm PST)
Phone: 408 453-6212
Email: <http://www.addonics.com/support/query/>