




Front View

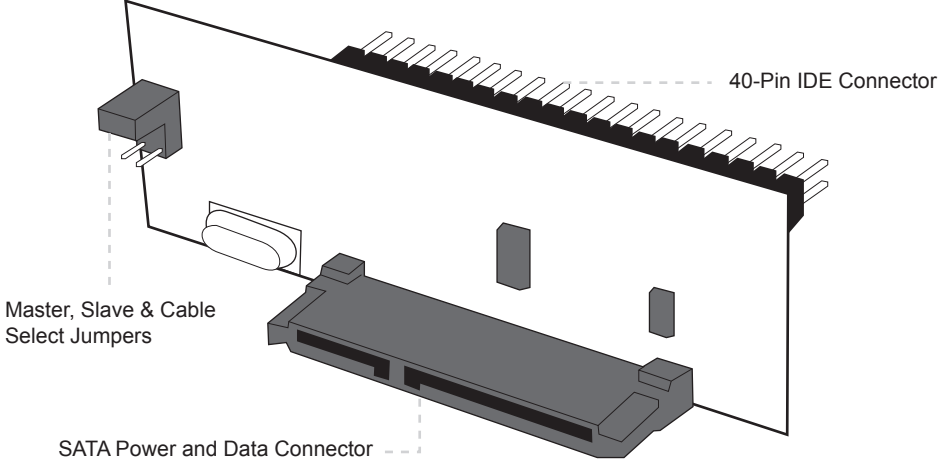

Back View

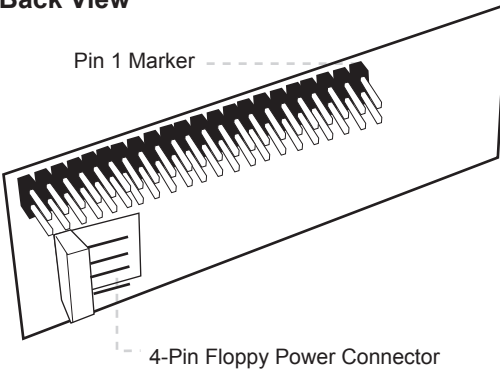

Jumper Settings

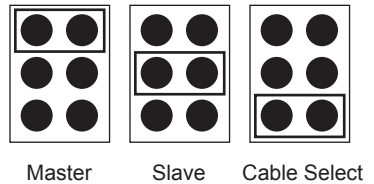

Note:

To set the SATA hard drive as a Master Device when connected to an IDE channel, you need to short the top pins located on the converter by placing a jumper. As a Slave Device short the middle pins.

v4.1.11

Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:


Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212


Email: <http://www.addonics.com/support/query/>

Installation:


1. Locate the SATA connector of your SATA drive.

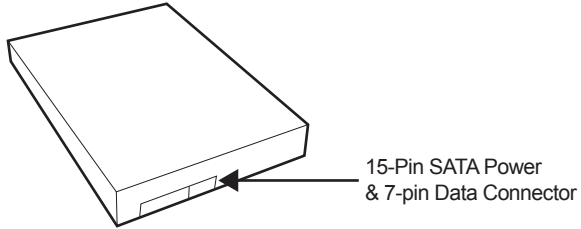

2. Connect the converter board to the SATA connector of the hard drive.

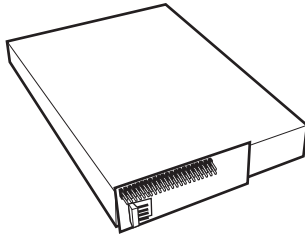

3. Using the provided Y-power cable, connect the 4-pin Floppy connector to the converter. This will provide power to the converter and to the hard drive.

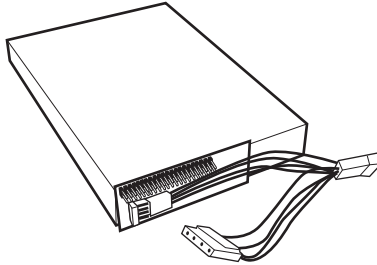

4. Connect the IDE ribbon cable to the 40-pin connector on the converter. The red edge of the ribbon cable needs to line up to pin 1 marker of the 40-pin connector. The other end of the ribbon cable will be connected to your motherboard's IDE channel.

