


ADDONICS TECHNOLOGIES

Model: ADSSAI44

Installation Guide

Front View

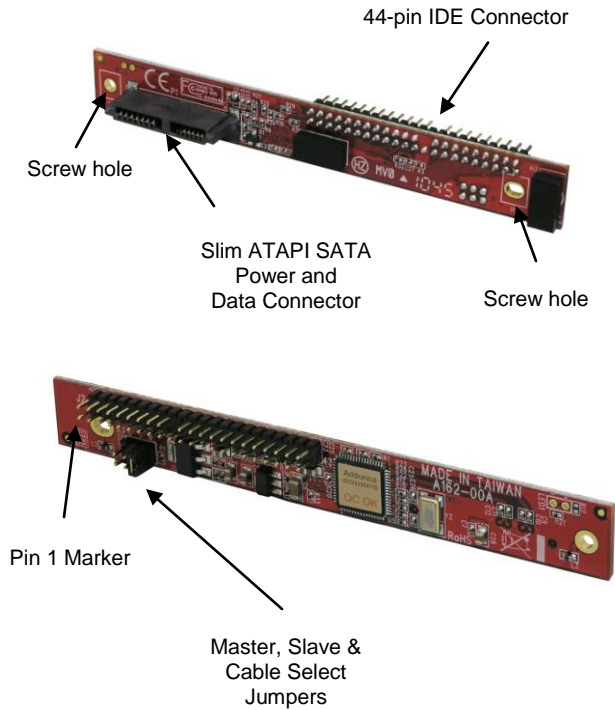

1. Locate the slim SATA ATAPI connector of your optical drive.
2. Connect the converter board to the Slim SATA ATAPI connector of the optical drive. Secure the adapter using screws.




3. (Optional) Connect the IDE ribbon cable to the 44-pin connector on the converter. The red edge of the ribbon cable needs to line up to pin 1 marker of the 44-pin connector. The other end of the ribbon cable will be connected to your motherboard's 44-pin IDE channel.


Jumper Settings



Master



Slave



Cable Select

Note: To set the slim ATAPI SATA drive as a Master Device when connected to an IDE channel, you need to short the top pins located on the converter by placing a jumper. As a Slave Device short the middle pins.

TECHNICAL SUPPORT

Email: <http://www.addonics.com/sales/>
Internet: <http://www.addonics.com>

Technical Support (8:30 am to 6:00 pm PST)
Phone: 408 573-8580
Email: <http://www.addonics.com/support/ticketid/>